
OFFICE CHAIR


ASSEMBLY INSTRUCTION

▽ ASSEMBLY PROGRAM


STEP 1

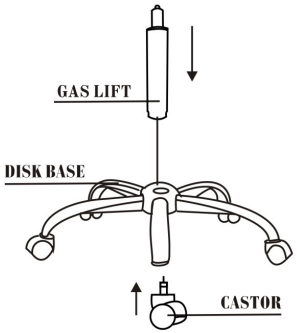


STEP 2

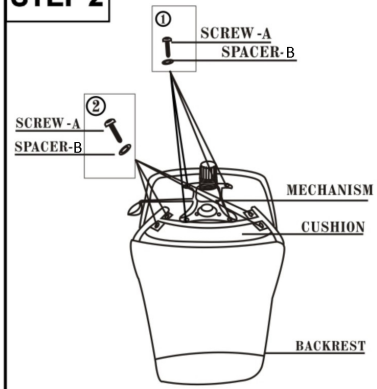


STEP 3

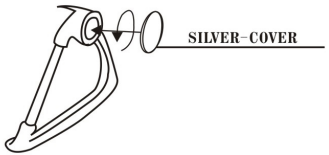

STEP4

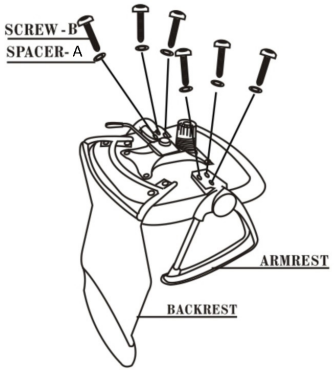



STEP5

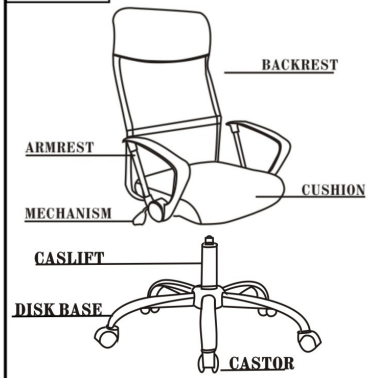

FINISH



▽ PARTS*QTY

BACKREST x1 	CASTOR x5 
CUSHION x1 	SCREW-A(M6x20mm) x8 
ARMREST x2 	SCREW-B(M6x25mm) x6 
SILVER-COVER x2 	SPACER-A(M6x14mm) x6 
MECHANISM x1 	SPACER-B(M6x18mm) x8 
GAS LIFT x1 	SPANNER x1 
DISK BASE x1 	

